



Electron Top Mfg.

rev 11/1/2010

(800) 221-4476

Installation Instructions

Always Check Stock # and Color Before Starting Installation



2000 -2009 Honda S 2000

HO 8300 to HO8310

Twill Vinyl



Start by cutting off old top, do not cut thru the straps or wires. Remove the three clips holding the rear panel. Then you can lift the center panel up. See next picture.



There might be some clips that you need to remove.


126-15 89th Ave Richmond Hill, NY 11418

No part of this material or accompanying drawings or photos may be reproduced in any form, or by any means, without the express permission of *Electron Top Mfg.*

Electron Top Mfg.



Next remove screw and clip.

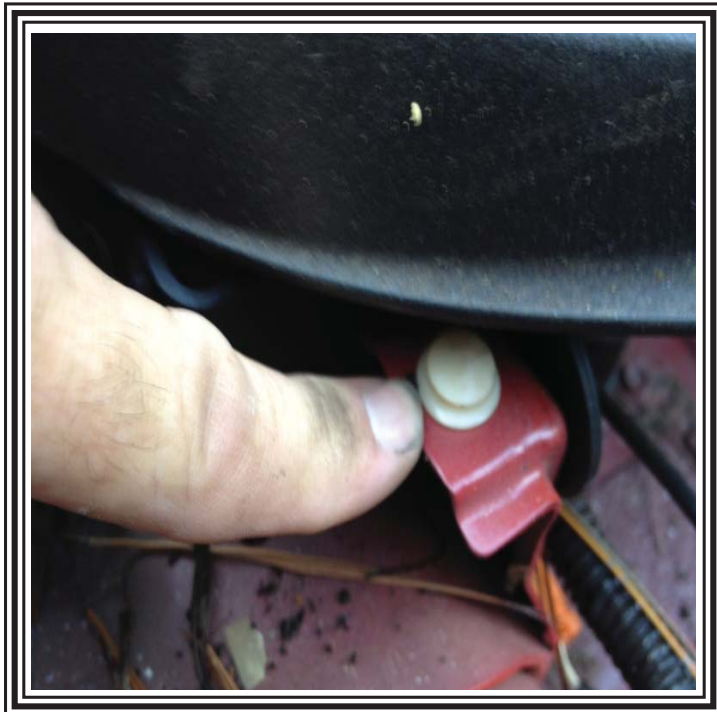

One of the clips will be hidden up under the roll bar cover.

You can watch a 6 minute video by typing this into your web browser,
<http://www.youtube.com/watch?v=xVAjMtIMMiU&feature=youtu.be>

Electron Top Mfg.



The side panel has THREE fasteners, TWO can be removed and the last one is under the roll bar plastic, and will be break off when you lift it up.
Lift up quickly to snap off clip.
See picture above.

Not trim off plastic as shown and then clean up with a file. You can also go on our Web Site to watch the six minute video mentioned before in these instructions at

www.electrontop.com



The trim off plastic is not visable when reinstalled.
You will have to trim it with a knife before reinstalling it. See picture 4 and 5.
Finally you can finish removing the top from the body of the car.

**MAKE SURE THAT YOU LAY THE CENTER PANEL IN THE WELL AREA BEFORE BOLTING THE TOP ON...
THERE MIGHT BE NO ROOM TO GET IT OVER THE HEAD REST.**