



Electron Top Mfg. Co.

H08305 & H08310

2000-01 Honda S2000 (Vinyl to Glass Conversion Top)

2002-09 Honda S2000 (O.E. Style Glass Window Top)

Please Read All PRIOR to REMOVAL of Old Top and BEFORE Installation of New Top


(These guidelines do not apply to vinyl window tops H08300).

H08310 - (O.E. Style Glass Window Replacement Top) - This O.E. frame has a spring by the door that moves the rear bow forward when lowering the top (picture 1). The elastic (picture 1) prevents the top from being pinched; the old elastic must be replaced with the new piece that we supply. * **Follow steps 1 & 3 ONLY**

H08305 - (Vinyl to Glass Conversion Top) - The vinyl window frame does not have the large factory spring in the quarters like the later models, 2002-09. This spring pulls the rear bow forward. On 2000-01 the car owner will need to physically bring the rear bow forward when they want to put the top down. Also the elastic will prevent the top from getting pinched by the frame (picture 1) and needs to be replaced with the one we supply. **IMPORTANT** - Install the webbing straps prior to removing the old top so you will have the bows in the proper position for the new top (picture 2). The elastic can be installed after the old top has been removed using the pop-rivets that we supply with our top. * **Follow steps 1, 2 & 3**

Installation Steps

- 1) The 1.5" elastic must be installed/replaced between the first and 2nd bows on both the right and left side of the vehicle (picture 1). **IMPORTANT** - Be sure the elastic is stretched using **GOOD TENSION**; this elastic needs to be able to move the bows during the folding operation.
- 2) The 1" webbing must be installed, right and left side, prior to removing the old top (this gives proper bow placement), between the 2nd and rear bow as detailed (picture 2). These straps will keep the bows in the proper position while the top is being put up. Rear bow should be pulled forward when lowering top.
- 3) The piece of bow lining attached to the rear bow seam of our top passes over the rear bow, the second bow and under the first bow to which it attaches with Velcro.

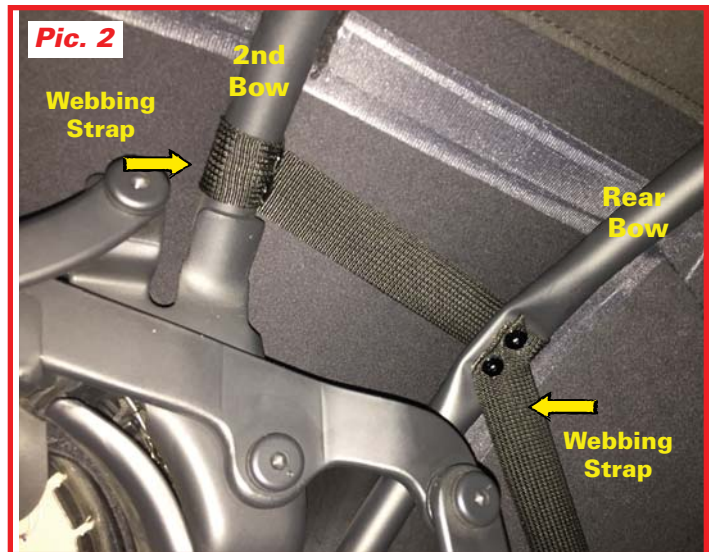

"Our instructions/warnings are simplified and intended as a guide for a professional Craftsman. To protect our quality, reputation and the perpetuation of our Auto Trim Industry we will only warranty our products that have been installed by an experienced Upholsterer/Trimmer."

If you have any questions please call (800) 221-4476